

Keys


Electronic key



Smart access system with push-button start
(→P.15, 17)

*: If equipped

Mechanical key

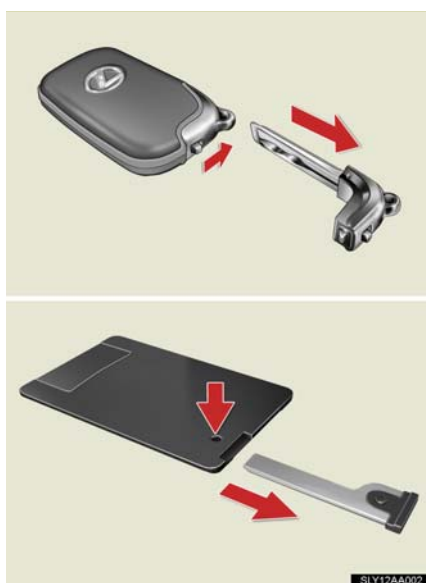

Carry the mechanical key together with the electronic key. If the electronic key battery is depleted or the entry function does not operate properly, you will need the mechanical key.

To take out the mechanical key:

Electronic keys: Slide the release lever and take the key out.

Card key: Press the lock release button and take the key out.

Wireless remote control



- 1 Locks all the doors
- 2 Unlocks all the doors
Pressing the button unlocks the driver's door. Pressing the button again within 3 seconds unlocks the other doors.
- 3 Opens the windows and moon roof (press and hold)*
- 4 Unlocks the trunk (press and hold)
- 5 Sounds the alarm (press and hold)

*: This setting must be customized at your Lexus dealer.

Smart Access System with Push-button Start

The following operations can be performed simply by carrying the electronic key (including the card key) on your person, for example in your pocket.

For details on starting the hybrid system, see page 17.

■ Entering the vehicle



Grip the driver's door handle to unlock the door. Grip the passenger's door handle to unlock all the doors.

Make sure to touch the sensor on the back of the handle.


The doors cannot be unlocked for 3 seconds after the doors are locked.

■ Exiting the vehicle



Touch the lock sensor (the indentation on the upper part of the door handle) to lock the doors.

■ Opening the trunk

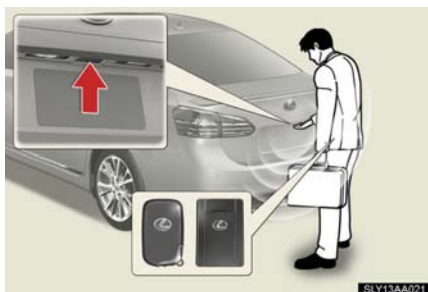


Press the button to unlock the trunk.

For details on what to do when the electronic key does not operate properly, see page 93.

Theft Deterrent System

■ Immobilizer system

► Without navigation system

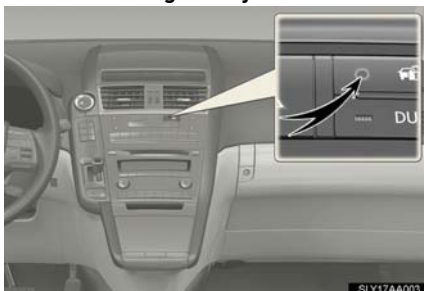

The indicator light flashes after the "POWER" switch has been turned off to indicate that the system is operating.

The indicator light stops flashing after the "POWER" switch has been turned to ACCESSORY or ON mode to indicate that the system has been canceled.

► With navigation system



The indicator light flashes after the "POWER" switch has been turned off to indicate that the system is operating.

The indicator light stops flashing after the "POWER" switch has been turned to ACCESSORY or ON mode to indicate that the system has been canceled.

■ Alarm

The system sounds the alarm and flashes the lights when forced entry is detected.

To set the alarm: Close the doors, trunk and hood, and lock all the doors using the entry function or wireless remote control. The system will be set automatically after 30 seconds.

The indicator light changes from being on to flashing when the system is set.

To deactivate or stop the alarm: start the hybrid system (The alarm will be deactivated or stopped after a few seconds.), or unlock the doors or trunk using the entry function, wireless remote control or mechanical key.